
# **FUME HOOD MONITOR SUBMITTAL**

The FHM used in conjunction with the AccuValve® Model AVC provides a comprehensive Fume Hood Control System. The FHM is provided with 2 mounting screws for securing to a standard single-gang electrical box and a prefabricated factory cable for connecting to the AccuValve® AVC Control Module.

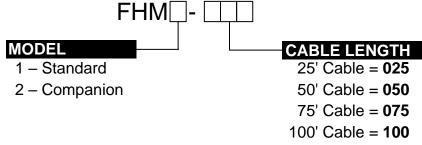

NOTE: If a longer cable is required, please contact factory.

## **SPECIFICATIONS**

Electrical:

The FHM is powered by the AVC using a factory provided cable.

Temperature Range:

Operating: -4°F to +158°F (-20°C to +70°C) Storage: -22°F to 176°F (-30°C to +80°C)

**Physical Construction:** 

Metal Plate with Continuous Vinyl Overlay which Provides Protection from Splashes Mounting:

Installs directly into a standard single-gang electrical box, usually provided on the fume hood Configuration Port:

Easily accessible USB Type C protected by removable rubber plug.


# **INSTALLATION**

CCUTROL

Danbury, CT 06810


Tel: 203-445-9991

accutrollic.com

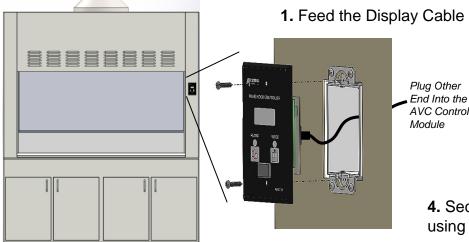

- 1. Feed the Display Cable into the back of the electrical box.
  - **2.** Plug the Display Cable into the RJ-45 Connector located on the back of the FHM.
    - **3.** Plug the other end of the Cable into the AccuValve AVC Control Module.
  - **4.** Secure the FHM to the electrical box using the two screws provided.

# **DIMENSIONS & FEATURES: FHM1**

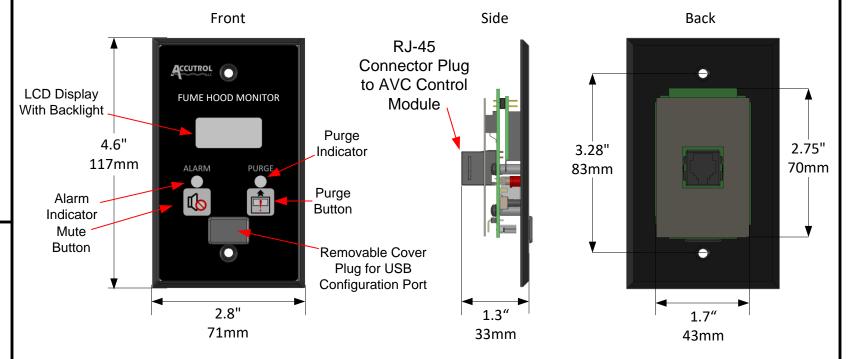

### Display

Character Liquid Crystal Display, 2 Lines x 8 Characters with White LED Backlight Indicates Face Velocity or Airflow Volume on Line 1 Provides Alarm and Setback Messages on Line 2

#### Alarm

Visual Alarm Indicator: LED, Super Bright Red 655nm

Display Alarm Indicator: Provides Message Identifying Alarm Type

Audible Alarm Indicator: Horn, 90dB @ 4KHz Mute Pushbutton Provided for Silencing Horn

#### Purge

Pushbutton Provided to Activate and Deactivate Local Purge Visual Indicator: LED, Super Bright Red 655nm

Configuration Port

USB Type C Protected by Removable Rubber Plug Connect to PC with the AccuValve Insight Software

All Configuration Settings for the FHM are Programmed through the AccuValve Insight Software

Accutrol Representative:

SUBMITTAL DRAWING FHM

THIS DOCUMENT IS SUBJECT
TO CHANGE WITHOUT NOTICE.

THIS DOCUMENT OR THE CONTENTS
THEREOF SHALL NOT BE MODIFIED
WITHOUT PRIOR WRITTEN
PERMISSION BY ACCUTROL LLC.

DWG. NO:	FHM SUBMITTAL DWG					
REVISION:	А	ECN:	2400			
REV. DATE:	9-28-18	SHEET:	1	OF:		

# **MODEL FHM2**

The FHM2 is a secondary display used in conjunction with the FHM1 Fume Hood Monitor for Teaching Hood applications. The information displayed on the FHM2 mirrors the information displayed on the FHM1 providing workers on both sides of the fume hood with identical status information.

## **FEATURES**

Display

Character Liquid Crystal Display, 2 Lines x 8 Characters with White LED Backlight Indicates Face Velocity or Airflow Volume on Line 1

Provides Alarm and Setback Messages on Line 2

Alarm Indicators


LED; super bright red 655nm


LCD Line 2; provides message identifying alarm type

Audible Alarm Tone; 90dB @ 4KHz


Purge

Visual Indicator: LED, Super Bright Red 655nm

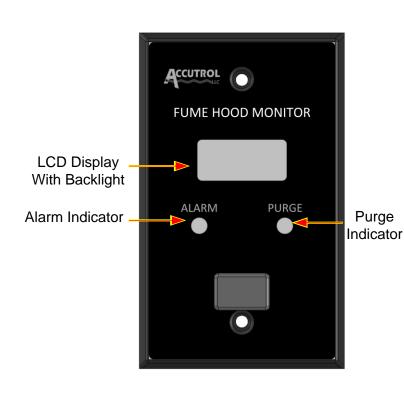

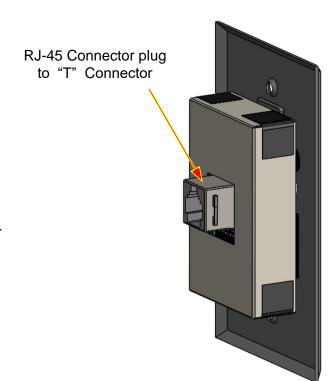

# **DIMENSIONS**

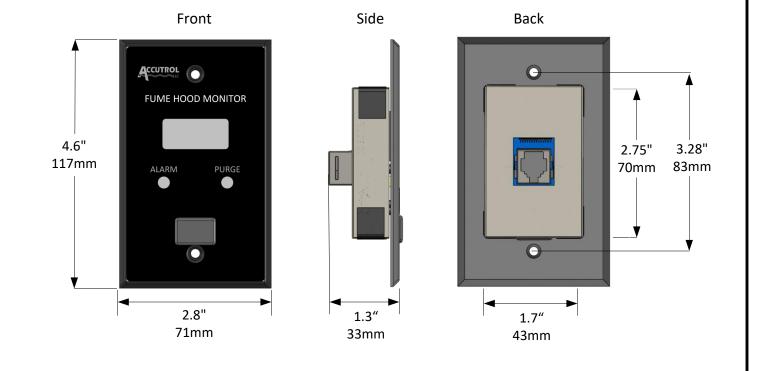

# PART LIST REFRENCE FOR INSTALLATION

PART #	QTY	DESCRIPTION
FHM2	1	FHM2 DISPLAY KIT
23-0054-025	1	FHM2 CABLE(BLACK,25FT) TO "T" CONNECTOR
23-0055	1	T CONNECTOR
	1	FHM1 CABLE TO AVC(WHITE, SEE NOTE FOR
23-0053-XXX		LENGTH)

NOTE: CABLE 23-0053-XXX COMES IN 4 SIZES. SEE MODEL CODE FOR INFO.



Accutrol Representative:


SUBMITTAL DRAWING FHM

THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE.	
THIS DOCUMENT OR THE CONTENTS THEREOF SHALL NOT BE MODIFIED	
WITHOUT PRIOR WRITTEN PERMISSION BY ACCUTROL LLC.	


DWG. NO:	FHM SUBMITTAL DWG					
REVISION:	А	ECN:	2400			
REV. DATE:	9-28-18	SHEET:	2	OF:	3	


# **MODEL FHM2 INSTALLATION**

The FHM2 is designed to install into a standard single-gang electrical box, usually provided on the front of the fume hood as shown below.

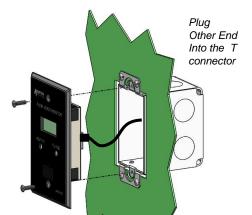

- 1. Feed the Cable (PN 23-0054-025) into the back of the electrical box.
- **2.** Plug the Cable (PN 23-0054-025) into the Connector located on the back of the FHM2.
- **3.** Plug the other end of the Cable (PN 23-0054-025) into the T connector(PN 23-0055).
- **4.** Secure the FHM2 to the electrical box using the two screws provided.

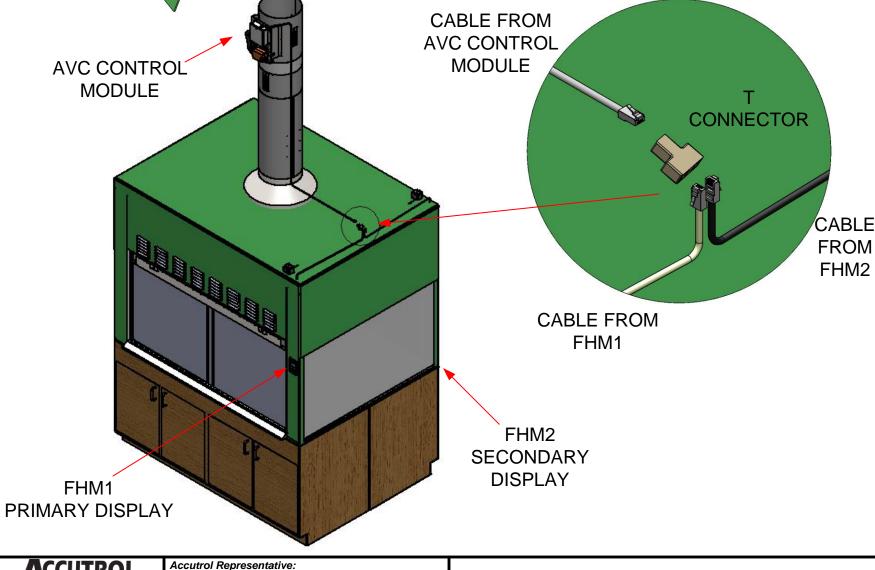

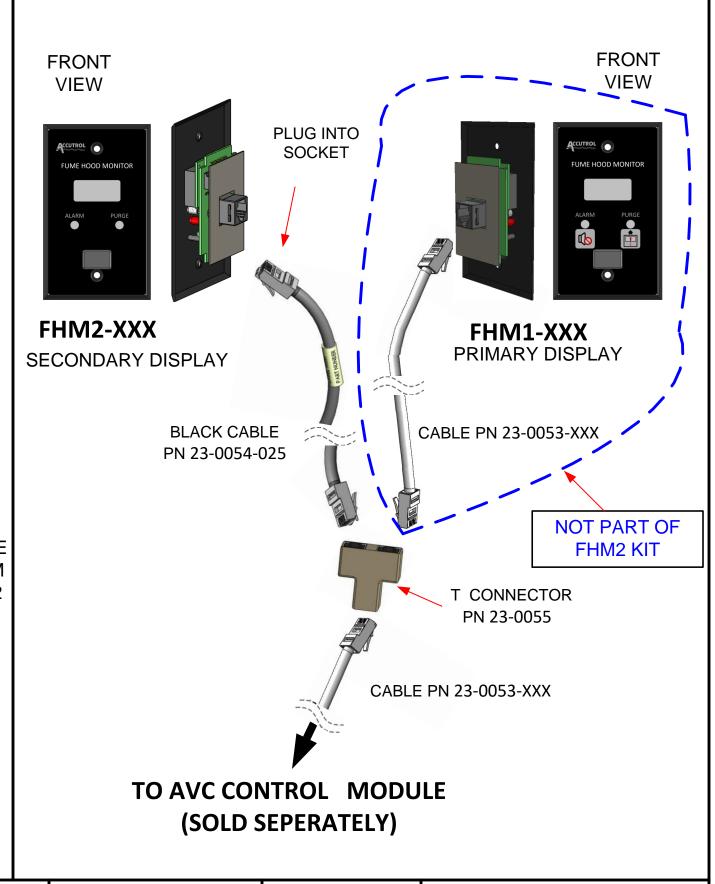

21 Commerce Dr Danbury, CT 06810

Tel: 203-445-9991

accutrollic.com

uror керresemauve.

SUBMITTAL DRAWING FHM

THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE. THIS DOCUMENT OR THE CONTENTS THEREOF SHALL NOT BE MODIFIED

WITHOUT PRIOR WRITTEN

PERMISSION BY ACCUTROL LLC.

DWG. NO: FHM SUBMITTAL DWG

REVISION: A ECN: 2400

REV. DATE: 9-28-18 SHEET: 3 OF: 3